

## VD04 Manual.

---

### VD04 - World



VD04



Breakout cables



Cable harness  
adapter



Power supply

#### Optional:



2G/3G/4G



Wi-Fi/Bluetooth



GPS/GLONASS

Connect the antennas to the SMA plugs on the VD04.

### Insert SIM card into the VD04

1. Press the yellow button beside the card tray.
2. Pull out the SIM card tray.
3. Place the SIM card into the tray (for micro SIM cards or smaller cards a corresponding adapter is required).
4. Slide the SIM Card tray back in the VD04 carefully.



## **Starting up the VD04.**

1. Connect the VD04 to the vehicle (must be 12V).
2. No configuration is necessary from the vehicle/machine user, the VD04 is configured at the factory or by the AGCO dealer.
3. Only use antennas and cables supplied by an AGCO dealer.
4. Check the VD04 status at the vehicle monitor.
5. Follow the vehicle monitor instructions and manual.